

# RoughCam<sup>®</sup> microTube IP

---

## User Manual



## Table of contents

<b>1</b>	<b>Introduction .....</b>	<b>4</b>
<b>2</b>	<b>Technical data .....</b>	<b>4</b>
2.1	Electrical parameters of the camera .....	6
2.2	Connection cable (SKD01-T/ASKD02-T) .....	6
2.3	Video-technical characteristics .....	7
2.4	Other technical data .....	7
<b>3</b>	<b>Safety Instructions .....</b>	<b>8</b>
<b>4</b>	<b>Installation .....</b>	<b>9</b>
<b>5</b>	<b>Electrical connection .....</b>	<b>11</b>
5.1	Potential equalization .....	11
5.2	Connection work at the device (terminal box) and fuses .....	12
5.2.1	Fusing .....	16
5.2.2	Plug assignments (RJ45).....	16
5.2.3	Tests prior to switching on voltage .....	17
<b>6</b>	<b>Working inside the camera housing .....</b>	<b>18</b>
6.1	Preparation for work: .....	18
6.2	Opening the pressure-resistant housing.....	18
6.3	Exchange of SD card .....	20
6.4	Closing the housing .....	22
<b>7</b>	<b>Commissioning, network access and visualization .....</b>	<b>23</b>
7.1	Network access .....	23
7.2	eneo Site Manager - assigning the IP address.....	23
7.3	Web interface, configuration and control .....	24
7.4	Visualization, RTSP video stream .....	25
7.5	ONVIF, VMS-Integration .....	25
<b>8</b>	<b>Maintenance / Modification.....</b>	<b>26</b>
<b>9</b>	<b>Disposal / Recycling .....</b>	<b>26</b>
<b>10</b>	<b>Drawings &amp; 3D models and further documentation.....</b>	<b>26</b>

## Table of Figures and Charts

Table 2-1 Model key .....	4
Fig. 2-1 Sectional view of SKD01-T .....	6
Fig. 2-2 Sectional view of ASKD02-T .....	7
Table 2-2 Other technical data .....	7
Table 4-1 Mounting accessories.....	10
Fig. 5-1 RoughCam® microTube IP Potential equalization .....	11
Table 5-1 Potential equalization .....	12
Fig. 5-2 Cable gland and cable.....	12
Fig. 5-3 RoughCam® microTube IP T10-VA0.4.K1.BOR-N.H-xxx.x- <u>I</u> .....	12
Fig. 5-4 RoughCam® microTube IP T10-VA0.4.K1.BOR-N.H-xxx.x- <u>P</u> .....	13
Fig. 5-5 Video Tutorial ExTB-3 .....	13
Table 5-2. Wire assignment of terminal box .....	14
Table 5-3 Wire assignment of terminal box ExTB-2/3 (ASKD02-T).....	14
Fig. 5-6 Sample circuit of terminal box ExTB-2.....	15
Fig. 5.7 Connection to the terminal box .....	15
Fig. 5-8 Plug assignment, RJ45.....	17
Fig. 6-1 Opening RoughCam® microTube IP .....	18
Fig. 6-2 Position of SD card.....	20
Fig. 6-3- Home screen eneo siteManager .....	20
Fig. 6-4- Setup eneo siteManager .....	21
Fig. 6-5- SD card eneo siteManager.....	21
Fig. 6-6- Time line eneo siteManager .....	21

## History of revisions

Product: RoughCam® microTube IP  
 Title: User Manual for RoughCam® microTube IP  
 Doc. -Id. 250217-PT10BA-SHe-RoughCam microTube IP\_en\_rev.01.docx  
 Author: Sabine Heinz  
 Created on: 17.02.2025

Rev. Index	Date	Name	Comment	Approved
0	17.02.2025	S. Heinz	Compilation of the document, based on ExCam microTubeIP	
1	28.04.2025	S. Heinz	Change in the default password	

## 1 Introduction

The RoughCam® microTube IP is a compact, powerful IP camera. The camera has a high-definition television resolution (1920x1080) and is equipped with a 1/2.8" CMOS sensor for great image quality and incomparable light sensitivity.

For more information, please visit our website at:

<https://www.samcon.eu/en/products/network/roughcam-microtube-ip>

When designing the RoughCam® microTube IP, we attached a very high importance to safety, mechanical precision and high quality of stainless steel.

## 2 Technical data

Product-name	Model variants				
1)	2) Type	3) Housing- combination	4) Temp.- range	5) Cable length [m]	6) Cable termin.
RoughCam® microTube IP	T10-	VA0.4.K1.BOR-	N.H-	005.N-	P
	T10-	VA0.4.K1.BOR-	N.H -	005.N-	T
	T10-	VA0.4.K1.BOR-	N.H -	005.A-	P
	T10-	VA0.4.K1.BOR-	N.H -	005.A-	T

Table 2-1 Model key

### Explanations:

- 1) RoughCam® **microTube IP** = Functional camera description of the RoughCam Series  
(technical data/specification of the individual camera module)
- 2) **T10** = SAMCON Production- Type 10
- 3) **VA0.4.K1.BOR** = T11 ex d housing (stainless steel 1.4404) with small diameter  
Ø<sub>VA1</sub>=48mm)  
**VA0.4.K1.BOR** = T11 VA0.4 housing with maximum body length (L<sub>R</sub> = 172mm)  
**VA0.4.K1.BOR** = K1 cable gland flange  
**VA0.4.K1.BOR** = Borosilicate sight glass DIN7080 (standard, for video cameras within visible spectral range: λ = 350...2000 [nm] and photografical infrared range (NIR), not suitable for thermographic applications (MIR/ FIR)
- 4) **N.H**= Normal ambient temperature range (T<sub>amb</sub> < +50°C)  
**N.H**= No PTC heater integrated (T<sub>amb</sub> > -20°C)
- 5) **005.N** = Length of the connection line in meter at delivery; 5m is the standard cable length, max. cable length is: 005...100 [m]  
**005.N** = Non armoured cable  
**005.A** = Armoured cable
- 6) **P** = Plug- termination (standard)  
CAT6, RJ-45 network plug (heavy duty), AWG 26-22,

contact assignment acc. To specification EIA/TIA-568B

**T =**

Terminal Box termination (*optional*)  
 4 x PoE Mode A connection (camera PoE)  
 (see chapter electrical connection)

Lens options

T10-VA.0.4.K1.BOR-N.H-XXX.X-X-058	Megapixel lens 4.3mm	F2.0	HAoV@16/9=58°
T10-VA.0.4.K1.BOR-N.H-XXX.X-X-034	Megapixel lens 8mm	F2.0	HAoV@16/9=34°

## 2.1 Electrical parameters of the camera

### Power supply of the camera via Ethernet (PoE):

Voltage supply:	PoE, IEEE 802.3af class 1
Consumption:	2.5 W

## 2.2 Connection cable (SKD01-T/ASKD02-T)

Description:	Data transfer and power supply of the camera module (compliant with DIN EN 60079-14)
Jacket colour:	Green (GN), similar to RAL3001

### System cable SKD01-T:

Outside diameter:	9.10 ± 0.2 mm
Bending radius:	10 x D <sub>a</sub> when installed, 5 x D <sub>a</sub> after relocation
Data line:	4 x 2 x AWG22/1 CAT.6
Properties:	PUR halogen-free, flame-retardant, UV-resistant, chemical resistance, shielded

Quick link:

[https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/SKD01-T\\_Datasheet.pdf](https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/SKD01-T_Datasheet.pdf)



Fig. 2-1 Sectional view of SKD01-T

### System cable ASKD02-T:

Outside diameter:	12.0 ± 0.4 mm
Bending radius:	20 x D <sub>a</sub> when installed and 10 x D <sub>a</sub> after relocation
Data line:	4 x 2 x AWG23/1 CAT.6
Properties:	PUR halogen-free, flame-retardant, UV-resistant, chemical resistance, shielded (see <a href="http://www.samcon.eu">www.samcon.eu</a> )

#### Quicklink:

[https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/ASKD02-T\\_Datasheet.pdf](https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/ASKD02-T_Datasheet.pdf)

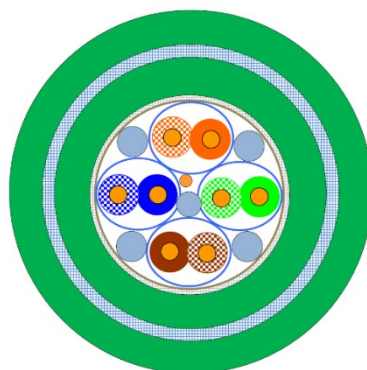


Fig. 2-2 Sectional view of ASKD02-T

## 2.3 Video-technical characteristics

We use the eneo ISM-42F0036MCB Module Network Camera in a pressure-resistant enclosure. For details, please refer to the Product Documentation, video-technical data of eneo®:

<https://eneo-security.com/en/ism-42f0036mcb.html>



## 2.4 Other technical data

	Camera	Terminal box
Permissible ambient temperature	-20°C ... +50°C	-60°C ... +55°C
Protection class as per EN 60529/IEC 529	IP66/68 (Test conditions: 24h/3m water column 5°C)	IP66
Housing material	stainless steel, mat. no. 1.4404	polyester resin
Weight	about 2.6 kg	about 1 kg
Dimensions	D48mm x 172mm	145mm x 145mm x 71mm

Table 2-2 Other technical data

### 3 Safety Instructions

It is absolutely mandatory to adhere to the national safety regulations and regulations for prevention of accidents, as well as to the safety instructions given below in this User Manual!



**Attention!**

Repairs may only be carried out by using original parts from the manufacturer.



**Attention!**

Prior to installation, take external sources of heat or cold into account! The temperature ranges prescribed for storage, transport and operating must be adhered to!



## 4 Installation

For commissioning and operating the camera, the relevant national regulations, as well as the generally accepted rules of technology shall prevail. Before mounting the camera, thoroughly check it for any transport damage, especially on the housing and cable. Installation, electrical connection and the first start must only be carried out by qualified specialists.

### Work preparation:



#### **Attention!**

**Prepare your work carefully and in accordance with the relevant regulations.**

To ensure the best image quality delivered by the network camera, plan the installation site carefully (consider light conditions, object distance or size, angle and minimum object distance to the focus).

- Use appropriate tools and aids.
- When working, ensure a safe stand.
- Make sure that any static charge is avoided.



#### **Attention!**

**Please observe the national security, installation and accident prevention regulations (e.g. DIN EN 60079-14) and the safety instructions in this User Manual, as well as the ones in the Installation Guidelines!**

The RoughCam® microTube IP consists of a camera housing and a terminal box. Both units are connected via a 5 m cable. Mount the camera according to the desired field of view. Install the terminal box so that a good accessibility is provided, in order to facilitate electrical connection.

Drawings for drill hole patterns and further information can be viewed on our product page:

Quick link:

<https://www.samcon.eu/en/products/network/roughcam-microtube-ip/>



## Optional mounting accessories

Wall bracket WMB-...		<b>WALL MOUNT WMB-VA0.x/1.x</b> Wall bracket for cameras of the T10-VA1.x-Series Suitable for hanging the cameras on walls. Material: Stainless steel 1.4404 Load bearing: 25 kg Dimensions: 80 x 100 x 205 mm
Weather protec- tion roof WPR-...		<b>WEATHER PROTECTION ROOF WPR-VA0.4</b> Weather protection roof for cameras of the T10-VA0.4-Series
Pole adapter PMB-...		<b>WALL MOUNT BRACKET PMB</b> Pole adapter for VA wall mount Material: stainless steel 1.4404 Suitable for pole diameters between 50 and 100 mm Load-bearing capacity: 50 kg Dimensions: 120 x 180 (x 130 bei Mast Ø 60 mm)

Table 4-1 Mounting accessories

## 5 Electrical connection



### Attention!

The electrical connection of the equipment may only be carried out by qualified and skilled personnel!



### Attention!

It is absolutely necessary to ground the RoughCam® series' housing via the PA connection.

The delivered RoughCam® microTube IP is equipped with an electrical connection cable of the type SKD01-T/ASKD02-T. The maximum transmission range from the camera to the next active network interface is 100 meters and can be individually specified by the client. The user is NOT authorised to do electrical connection procedures inside the enclosure.

### 5.1 Potential equalization

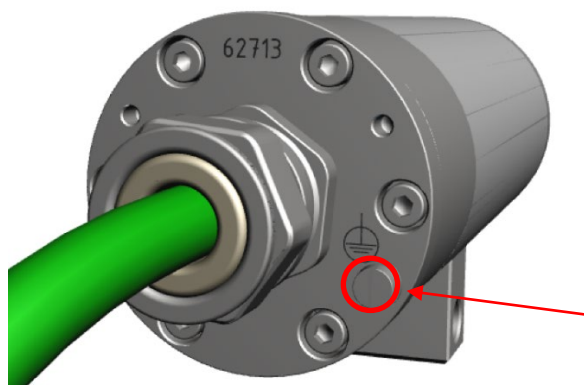


Fig. 5-1 RoughCam® microTube IP Potential equalization

Potential equalization/grounding of the camera housing is absolutely necessary, in order to avoid static charges and thus the formation of sparks. For this purpose, a screw terminal is provided at the rear side, at the bottom (right) (see Figure 5-1). The cross-section of the potential equalization should comply with the National Ground Rules (at least 4mm<sup>2</sup>).

Wiring table:

Potential	Colour (IEC 60757)	Cross-section	Comment
PA	GN/YE	4 mm <sup>2</sup> (rigid)	Terminal: Slotted screw M4x0.7 (DIN 84) with washer Ø9mm (DIN 125A), Keep 3 Nm tightening torque!

Table 5-1 Potential equalization

## 5.2 Connection work at the device (terminal box) and fuses

Cable gland for SKD01-T:  
ADE 1F2 Type5 - M20 (Neopren);  
7-12mm  
Cable gland for ASKD02-T:  
ADE 4F Type6 - M20;  
10-16mm

Cable

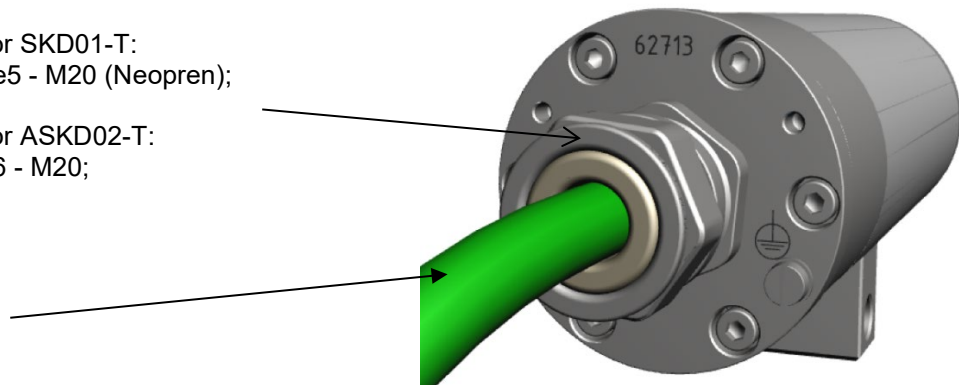


Fig. 5-2 Cable gland and cable

### Power supply for the camera (PoE)

Voltage supply:

PoE, IEEE 802.3af class 1

Consumption:

2.5 W

The figures 5.3 and 5.4 illustrate the potential cable terminations of the RoughCam® microTube IP. Possible terminations are: terminal box or plug.

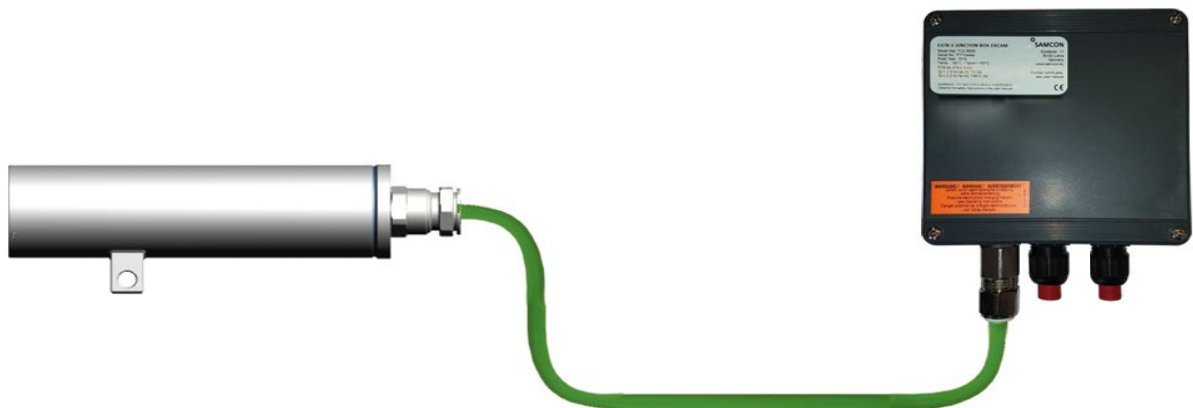


Fig. 5-3 RoughCam® microTube IP T10-VA0.4.K1.BOR-N.H-xxx.x-I

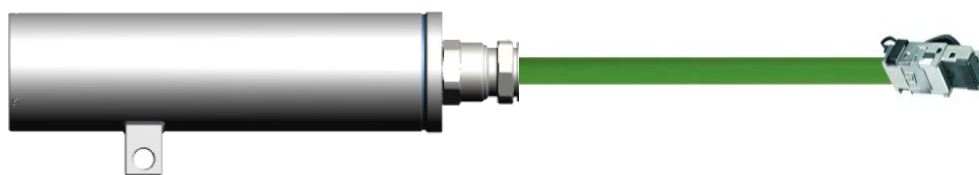


Fig. 5-4 RoughCam® microTube IP T10-VA0.4.K1.BOR-N.H-xxx.x-P

### Video Tutorial:

Observe our video tutorial:

“SAMCON 01 Wiring the cable SKDP03-T to the junction box ExTB-3”  
<https://go.samcon.eu/v01>



Fig. 5-5 Video Tutorial ExTB-3

The pin assignment of the SKD01-T is executed in accordance with the standard EIA/TIA-568B as follows:

Camera (T568B)	Colour SKD02-T (IEC60757)	Terminal ExTB-2	Cross-sectional surface	Comment
Tx+	WH / OG	1	0.32 mm <sup>2</sup>	Solid conductor
Tx-	OG	2	0.32 mm <sup>2</sup>	Solid conductor
Rx+	WH / GN	3	0.32 mm <sup>2</sup>	Solid conductor
Rx-	GN	4	0.32 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	WH / BU	5	0.32 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	BU	6	0.32 mm <sup>2</sup>	Solid conductor
(PoE GND)	WH / BN	7	0.32 mm <sup>2</sup>	Solid conductor
(PoE GND)	BN	8	0.32 mm <sup>2</sup>	Solid conductor
GND/SHD	YE / GN	PE	2.5 mm <sup>2</sup>	Flex

Table 5-2. Wire assignment of terminal box

The pin assignment of the ASKD02-T is executed in accordance with the standard EIA/TIA-568B as follows:

Camera (T568B)	Colour ASKD02-T (IEC60757)	Terminal ExTB-2/3	Cross-sectional surface	Comment
<b>Reinforcement</b>	YE / GN	PE	2.5 mm <sup>2</sup>	Flex
Tx+	WH / OG	1	0.26 mm <sup>2</sup>	Solid conductor
Tx-	OG	2	0.26 mm <sup>2</sup>	Solid conductor
Rx+	WH / GN	3	0.26 mm <sup>2</sup>	Solid conductor
Rx-	GN	4	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	WH / BU	5	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	BU	6	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	WH / BN	7	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	BN	8	0.26 mm <sup>2</sup>	Solid conductor
GND/SHD	YE / GN	PE	2.5 mm <sup>2</sup>	Flex

Table 5-3 Wire assignment of terminal box ExTB-2/3 (ASKD02-T)

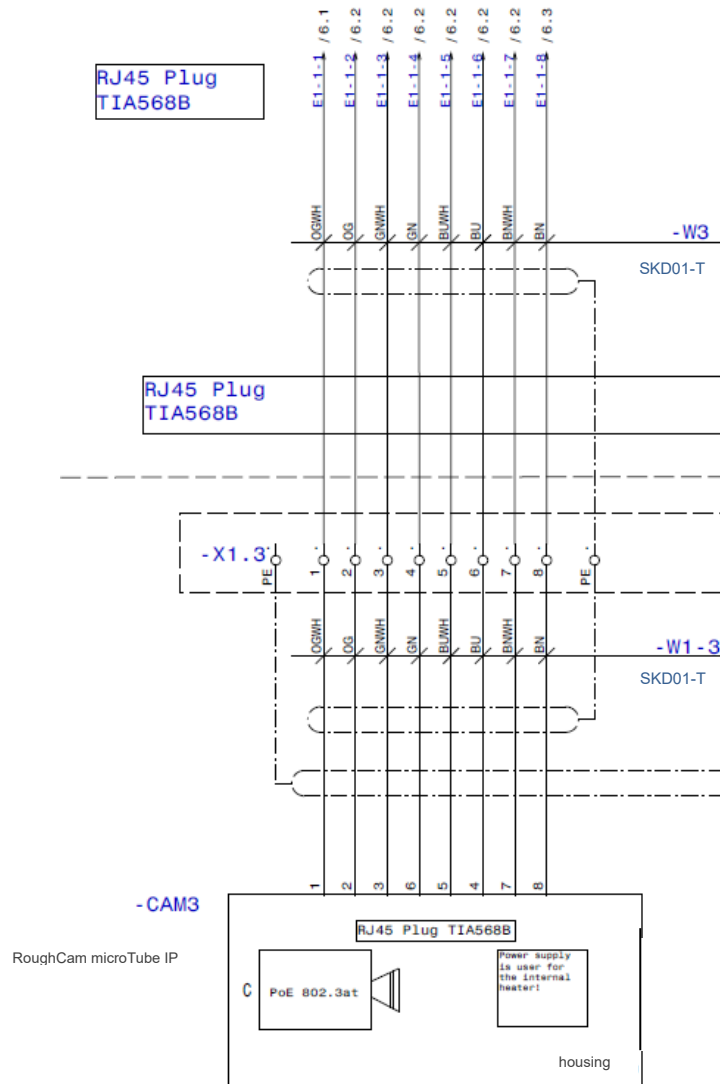


Fig. 5-6 Sample circuit of terminal box ExtTB-2

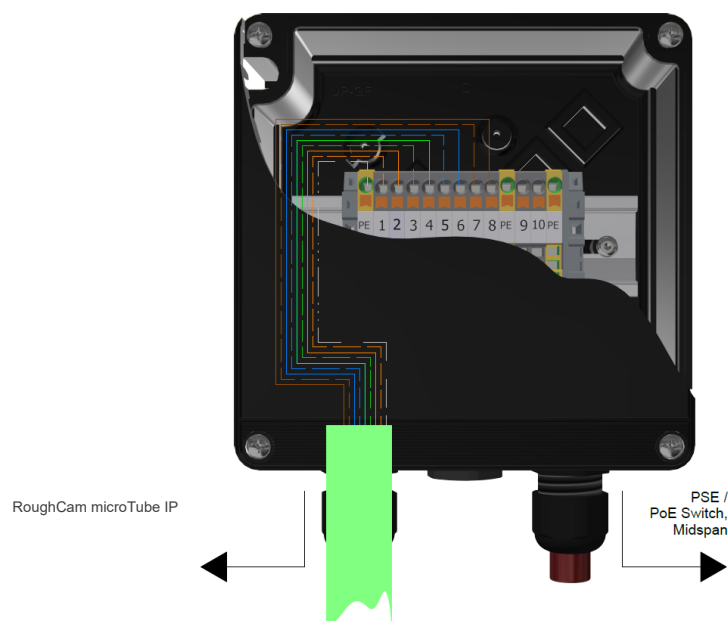


Fig. 5.7 Connection to the terminal box

**Attention!**

Introduce the foiling up to about 15 mm close to the terminals, in order to prevent alien crosstalk. Make sure that the foiling cannot cause any short circuit of the data pairs!

**Attention!**

Bring the twisted pair composite up to about 10 mm close to the terminals, in order to ensure interference immunity.

**Attention!**

Use only terminals approved by SAMCON.

**Attention!**

Finally, check your network installation with a Class-D Link Test.

### 5.2.1 Fusing

PoE power supply requires no fuses. The power supply fusing depends on the cable cross-section and length.

**Attention!**

Please pay attention to the national and international regulations regarding selectivity and line protection.

### 5.2.2 Plug assignments (RJ45)

The data transfer of the RoughCam® microTube IP uses a 100 Mbit/s Ethernet connection (100BASE-TX). If the cable termination uses a plug, the latter should be plugged into the RJ45 PoE slot of the network device (PSE). Prior to connecting it to the camera, the network device (PSE) can already be supplied with power, hence there is no „power ON“ priority which has to be observed.

**Attention!**

Use appropriate RJ45 plugs! Check the cable shielding, cross-section and the outside diameter!

**Attention!**

It is imperative to ensure a correct routing of the individual wires according to the EIA/TIA-568B"

**Attention!**

Finally, check your network installation with a Class-D Link Test.



Detailed instructions on how to connect a RJ45 plug are available in our video tutorial:  
“SAMCON 03 Mounting and installing the RJ45 jack to SAMCON cables”  
<https://go.samcon.eu/v03>



Fig. 5-8 Plug assignment, RJ45

### 5.2.3 Tests prior to switching on voltage



**Attention!**

Prior to starting the device, perform all tests as indicated by the national regulations. Furthermore, check the correct function and installation of the device in accordance with this User Manual and other applicable regulations.



**Attention!**

Incorrect installation or operation of the camera may lead to a loss of warranty!



**Attention!**

Do not switch on the camera at temperatures below 0°C!

## 6 Working inside the camera housing

The customer may open the housing only if it is absolutely necessary. Only the change of the SD Card is a reason for this.

### 6.1 Preparation for work:



**Attention!**

**Prepare your work carefully and in accordance with the relevant regulations.**

### 6.2 Opening the pressure-resistant housing

If the RoughCam® microTube IP is equipped with a weather protection roof this has to be removed prior to starting your work! To do so, loosen the 2 screws M3\*6mm at the back side of the bracket holders.

#### **Attention!**

To open the stainless-steel housing (T11 VA0.4) of RoughCam® microTube IP, loosen the six cylinder-head hexagon screws (DIN 912/ ISO 4762) together with their spring rings (DIN 127A) on the rear side of the cable and power supply flange (see Figure 6-1). Caution: do not touch the screw threads with your skin or clothes! On the threads, there is LOC-TITE® 243™ (chemical basis is dimethacrylate ester) applied to prevent the bolted connection from unintentional loosening because of impacts and vibrations and to seal them tightly. It is not permitted for the customer to open the front-side sight glass flange! There is no need of such an action.

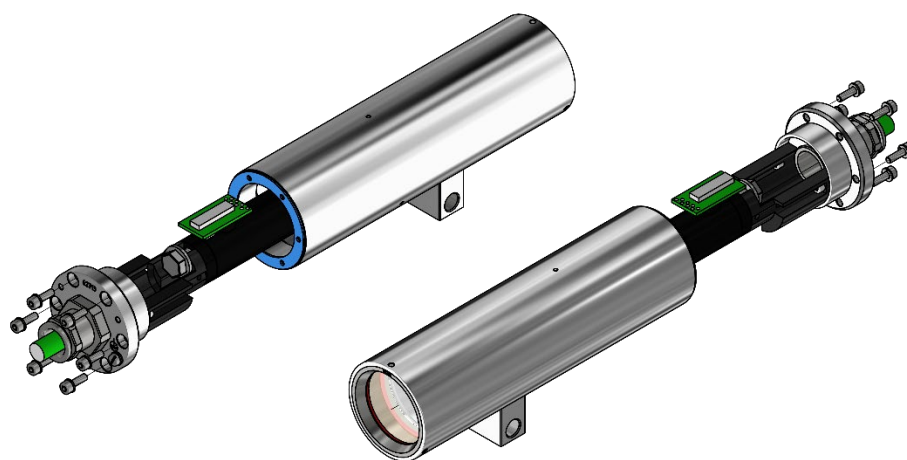


Fig. 6-1 Opening RoughCam® microTube IP

Carefully pull out the cable and supply flange to the rear, as straight as possible. Because of negative pressure, it may be difficult to remove the flange. The cylindrical clearance fit (H8f7 - DIN ISO 286) of the camera body and flange may not be tilted! Risk of damage to the proof gap !

**Attention:** The mounting adapter with the camera module and optics, as well as the temperature control, and (if applicable) auxiliary relays and terminal block are fixed on the cable and supply flange. Dealing with these components, too, you have to work very carefully and precisely in order to avoid canting and damage to the in-built components! The module must be carefully rotated and tilted slightly. Caution: do not touch the cylindrical fit surface with your skin or clothes! On the surface, there is oil lubricating paste to protect the surface against fretting corrosion and mechanical stresses.

When you open the housing, pay attention that you do not damage the GYLON® flat seal (blue, RAL5012) and do not make it dirty! The flat gasket is loosely attached to the cable and power supply flange. It is fixed only by the bolted connections!



**Attention!**

**Pay attention not to damage the surface of the drill hole and the shaft (fitting) of the gap.**



**Attention!**

**Pay attention not to damage the housing seals. Keep them clean!**

### 6.3 Exchange of SD card

If it is necessary to change the SD card, the rear housing part must be unscrewed and the camera module removed.



Fig. 6-2 Position of SD card



**If it is necessary to replace the SD card, the standard recording function must be adjusted or switched off!**

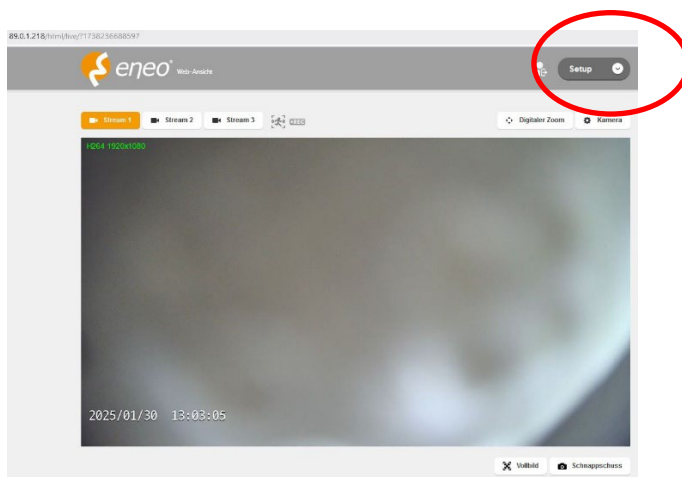


Fig. 6-3- Home screen eneo siteManager

After logging in to the **eneo Site Manager** (see Chapter 7.1), press the Setup button in the upper part of the screen (see Figure 6.3).

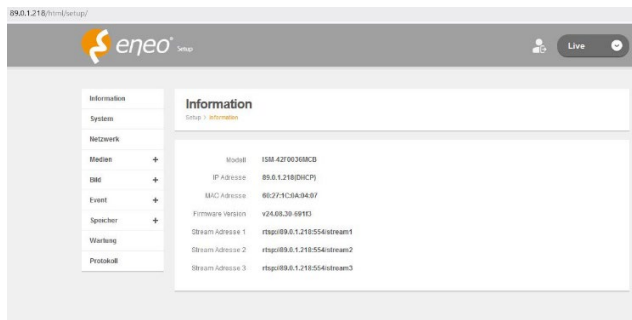


Fig. 6-4- Setup eneo siteManager

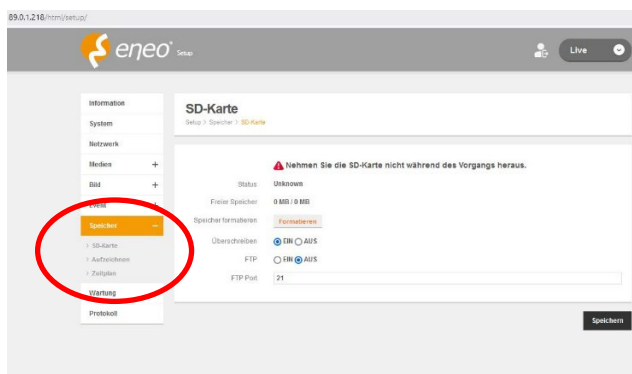


Fig. 6-5- SD card eneo siteManager

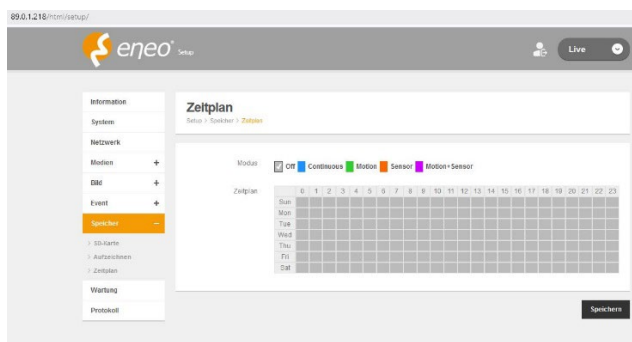


Fig. 6-6- Time line eneo siteManager

Select and adjust the schedule/turn it off and save.

## 6.4 Closing the housing

For closing the housing, proceed in reverse order as when opening. Use exclusively original screws included in the supply.

The cable and power-supply flange (K1) is fixed by 6 cylinder-head screws M3 (ISO metric right-turning) with 10 mm thread length (DIN 912/ ISO 4762, grade 6g). Materials of bolted connections are identical to the stainless steel housing (standard material no. 1.4404 AISI316L). Check whether the threaded holes are undamaged and clean. Before closing, it is also absolutely imperative to check the gap (circular cylindrical fit).



### **Attention!**

**If any mechanical damages occurred to the fitting gap, it is no longer allowed to use the housing!**



### **Attention!**

**Do not lock-in any foreign objects in the housing.**

Dismantled screw locks (spring washers DIN 127A) must be used again.

The GYLON® gasket must be used in undamaged condition, according to the flange hole pattern, and placed between the flange and the hull. The lateral position of the flat surface / contact surface is arbitrary.

If, when closing the housing, you see that the surface of the fitting gap is dirty or insufficiently lubricated, clean it with a clean cloth and de-grease it with a suitable cleaning agent. Then re-grease it with lubricant suitable for this specific application (e.g., Molykote® P-40 gel for standard applications or special grease OKS 403 in the event of heavy seawater influence).

The screwed connections of flange and body components must always be tightened *crosswise* to a torque of **1.2 Nm**! Do not tighten the screw too strongly! It can cause rupture of the cylinder head or over-stretching the threads.



**Cylinder-head bolts for connection of the camera body with the flange component must always be tightened at a 1.2 Nm torque - crosswise and evenly! Use Loctite.**

## 7 Commissioning, network access and visualization

The camera is configured via the device's own website, the video stream can be accessed via RTSP or you can integrate the camera into your video management system using the ONVIF protocol.

### 7.1 Network access

The camera obtains an IP address via DHCP. If there is no DHCP server on the network, the **default IP address is 192.168.1.10**

Default username: **admin**  
Default password: **Admin1234**

Without a DHCP server, please add multiple cameras to the network one after the other to avoid conflicts due to identical IP addresses.

To find out the IP address of the camera assigned via DHCP, you can display or assign it using the **eneo Site Manager**.

### 7.2 eneo Site Manager - assigning the IP address

Download the eneo Site Manager here:

<https://eneo-security.com/en/eneo-site-manager.html>

The eneo Site Manager automatically detects cameras present in the network and displays their IP addresses in a device list. The RoughCam® microTube IP has the designation "ISM-42F0036MCB".

If necessary, you can also assign a static IP address to the camera. To do this, select the camera in the list, right-click to open the context menu and then the network settings. Deactivate the DHCP checkbox and set the desired IP address.



### 7.3 Web interface, configuration and control

Enter the camera's IP address in your web browser and open the web interface. By automatically redirecting to https://... you may receive a message that the connection is not secure or private. Please confirm opening the website using the “Advanced” button.


Default username: **admin**

Default password: **Admin1234**

The web interface is intuitive and offers a variety of configuration options. Detailed documentation on the web interface can be found in the eneo operating instructions:

<https://eneo-security.com/en/ism-42f0036mcb.html>

When delivered, the RoughCam® microTube IP is set to the applicable network frequency.  
 PAL = 50Hz (Europe) / NTSC = 60Hz (USA)

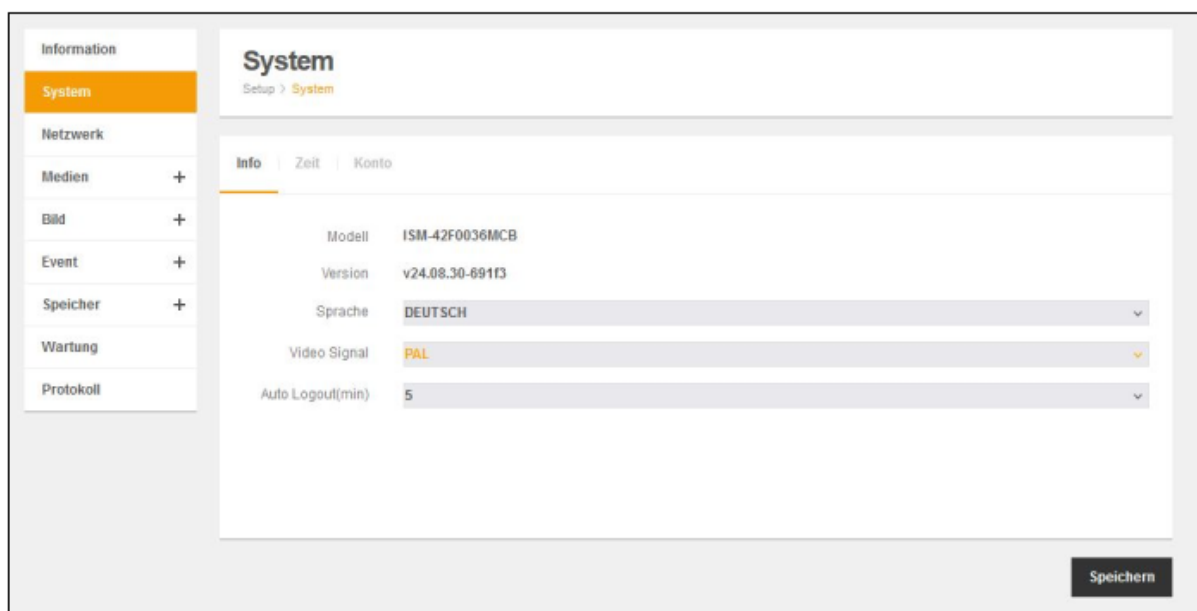



## 7.4 Visualization, RTSP video stream

The camera's video stream can be visualized via the following addresses:

RTSP

rtsp://<user>:<password>@<ip>:554/1/stream1

rtsp://<user>:<password>@<ip>:554/1/stream2

rtsp://<user>:<password>@<ip>:554/1/stream3

Example:

rtsp://admin:admin@192.168.1.10:554/1/stream1

## 7.5 ONVIF, VMS-Integration

The camera can be integrated into your video management system (VMS) via ONVIF Profile S and Profile T. We recommend [AXIS Camera Station](#) or [ONVIF Device Manager](#) for easy configuration.

## **8 Maintenance / Modification**

The applicable regulations for the maintenance and servicing of electrical devices must be adhered to.

The required maintenance intervals are specific to the individual devices. The operating company has to determine these intervals depending on the application parameters. The maintenance tasks all parts have to be checked (e.g., proper condition of the casing, seals and cable entry points). If maintenance measures are necessary they have to be initiated and/or executed.

Repairs may only be carried out with original parts of SAMCON Prozessleittechnik GmbH. Damaged housings have to be replaced completely. In case of doubt, send the part in question back to SAMCON Prozessleittechnik GmbH.

Reparations must only be carried out in accordance with nationally applied regulations by SAMCON Prozessleittechnik GmbH or by an authorised electrical technician authorised by SAMCON Prozessleittechnik GmbH. Rebuilding of or alterations to the devices are not permitted.

## **9 Disposal / Recycling**

When disposing of the device, nationally applicable regulations must be observed. This Document is subject to alterations and additions.

## **10 Drawings & 3D models and further documentation**

All drawings, 3D models and other information are available in the download area of the product page on our website:

<https://www.samcon.eu/en/products/network/roughcam-microtube-ip/>

**Ex Cameras**

**Fix Bullet Cameras**

- ExCam microTube IP
- ExCam IPM3016 \*EOL\*
- ExCam IPM2036
- ExCam IPP1275

**Varifocal Bullet Cameras**

- Autofocus/Motorzoom Bullet Cameras
- Panoramic Cameras
- PTZ Dome Cameras
- Thermal Cameras
- Modular Ex Cameras
- Analog Ex Cameras (CVBS)
- coolJacket

**Robust Cameras (non-ex)**

**Your Individual Camera (BTO)**

**Ex Luminaires**

- Robust Luminaires
- Ex-d Camera Enclosures

**Connection Systems**

- Cables for Ex-Areas
- Mounting Systems
- Wash and Wipe Equipment
- Software

**Downloads:**

- [Comparison Chart](#)
- [Datasheet](#)
- [3D-Model](#)
- [Usermanual](#)
- [Drawing](#)
- [CAD-Files \(DXF\)](#)
- [Ex Installation Manual](#)
- [ATEX Type Examination](#)
- [IECEX Cert.-of-Conformity](#)
- [UKEX-Certification](#)
- [EAC-Ex-Certification](#)
- [INMETRO](#)
- [MASC \(Southfrica\)](#)
- [Dec. of Conformity](#)

## ExCam<sup>®</sup> microTube IP

The ExCam microTube IP is a compact, powerful network camera. It is particularly suitable for use in potentially explosive areas. It offers **FullHD resolution (1920x1080) and a 1/2.8" sensor for great image quality**. It is approved according to Directive 2014/34/EU (ATEX), IECEx, INMETRO, EAC-Ex, .... You can find these and other available approvals in the download area.

**Features.**

- ➊ Broad Certification Landscape for Hazardous Areas (ATEX, IECEx, INMETRO, EAC-Ex and more)
- ➋ High Resolution: FullHD 1920x1080p
- ➌ Unparalleled Light Sensitivity with 1/2.8" CMOS Sensor
- ➍ Day & Night Functionality
- ➎ Single-Cable-Solution (PoE)
- ➏ Protection Level of IP66/68 (IEC 60529)
- ➐ WDR Technologies
- ➑ Easy VMS Integration
- ➒ Multi-Streaming and Videocompression H.264
- ➓ [Extensive Accessories](#)

**Camera with excellent light sensitivity**

With the ExCam microTube IP, we are expanding our range to include a very compact explosion-proof camera. The ExCam microTube IP has a 1/2.8" CMOS sensor and the resulting excellent image quality, very high sensitivity and high resolution. The explosion-proof camera can operate with a minimum light intensity of 0.05 lux, resulting in a significant improvement in image quality under limited lighting conditions. The camera achieves a high resolution of 1080p (1920x1080) at 30fps.

**Explosion-proof camera with ATEX, IECEx and more approvals**

The ExCam series is certified under both the European (ATEX) and international directives ( IECEx ). The explosion-proof housing is approved for ATEX Group II for zones 1, 2 as well as 21 and 22 including explosion groups IIC / IIIC. It now also has a number of other approvals, such as INMETRO, PESO, MASC, UKEX and EAC-Ex.

When developing the ExCam series, great importance was placed on safety as well as mechanical precision and high-quality stainless steel. In addition, a modular structure was at the forefront of development.

With regard to the technical parameters, we have pushed the limits of what is possible: In areas such as media resistance and ambient temperature, we set standards with the ExCam series.

**Small device – great functionality – maximum durability**

The ExCam microTube IP is an extremely compact camera. It is housed in a small, extremely robust stainless steel housing and is perfect for use in the most demanding environments under the harshest conditions in the world. The Ex-d housing of the Full HD camera is IP66/68 compliant and, thanks to the high-quality materials, resistant to a wide range of media! The ExCam microTube IP can be used at ambient temperatures between -10°C and +50°C.

**Quick installation and wiring**

Connection and assembly are incredibly easy. Thanks to Power over Ethernet ( PoE ), data and power supply can be carried in one cable. This means that only a PoE switch or a PoE midspan is required for the connection in the safe area. The camera is powered via Power over Ethernet ( PoE according to IEEE 802.3af) via the network, eliminating the need for costly installation of a separate power supply line.

**WDR for perfect Pictures also at bad Lighting conditions – automatic Image optimization**

If you wish additional technical information, please contact us at: [support@samcon.eu](mailto:support@samcon.eu)



# SAMCON

Schillerstrasse 17, 35102 Lohra-Altenvers,  
Germany  
[www.samcon.eu](http://www.samcon.eu), [info@samcon.eu](mailto:info@samcon.eu)  
Phone: +49 6426 9231-0, fax: - 31

